



DIGITAL WIRELESS INFRARED CCTV CAMERA
QUICKSTART GUIDE

WHAT'S INCLUDED

You should have the following items:

- Wireless Camera
- AC Adaptor (9V) for camera
- Screw

CAMERA SETUP

Before you install the camera, carefully plan where and how it will be positioned, and where you will route the cable that connects the camera to the power adaptor.

Before starting permanent installation, verify its performance by observing the image on the receiver when camera is positioned in the same location/ position where it will be permanently installed and the receiver is placed in the location where it will be used most of the time.

1. Use the included mounting screws to mount the camera to the mounting surface:

- Mark the positions of the screw holes on the mounting surface.
- Drill holes and insert the drywall plugs (included) as needed.
- Firmly attach the camera to the mounting surface using the included screws.

Note: If you are running the power cable through the mounting surface, connect power before firmly attaching the camera to the mounting surface.

Note: If you run the power cable along the mounting surface, the cable must go through the cable notch on the camera base. This will keep the camera base flush to the mounting surface.

2. Loosen the thumbscrews and the adjustment ring by turning them counter clockwise.


3. Adjust the angle of the camera until the desired view is set. Tighten the thumbscrews and the adjustment ring to secure the camera's position.

Note: You can install additional cameras (maximum of 4). When adding cameras that were not included in the original box, you will need to pair up the cameras with the receiver.

4. Connect the power cable from the camera to the weatherproof power connector. Plug the power adapter into a power outlet or surge protector.

Note: Power cables are only weatherproof when fully inserted at the connection point.

CAMERA PAIRING WITH THE RECIEVER

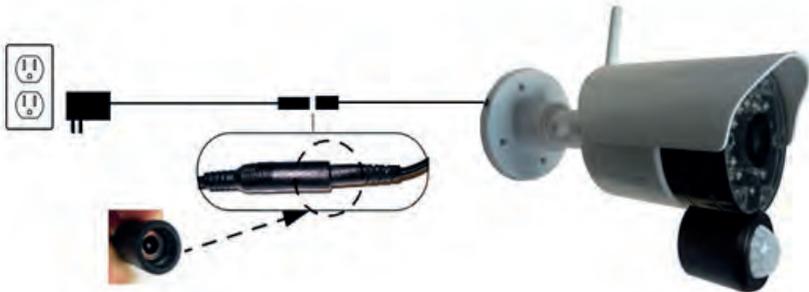

1. Connect the new camera to a power outlet place the camera within 1ft of the wireless receiver.

2. Press the **Menu** on the receiver. Move the joystick to select the camera and the **pairing**



3. A message will be displayed on the receiver screen.

The receiver will count down from 30 seconds – you must press the Pair button on the rear of the camera during this time to successfully pair the camera. If the button on the camera is not pressed, the receiver will return to the view screen, and no pairing will take place.



4. Following the on-screen prompt, press the Pair button on the back of the camera. You have 30 seconds to press the Pair button on the camera, once paired, after 3s will see the live video on receivers screen.

Note: If you pair a new camera to a channel that is already being used by an existing camera, the new camera will be connected to that channel, and the old camera will automatically be disconnected.

Note: If you do not press the pair button on the camera during the 30 second pairing countdown, repeat steps 2-4 to try the pairing process again.

Note: If the speaker begins squealing, move the camera and receiver away from each other.